apuro

Vegetable Cutter

Instruction manual

Model

G784-A

Safety Tips

⚠ **THE VEGETABLE CUTTER IS A HAZARDOUS APPLIANCE AND MUST ONLY BE USED BY TRAINED PERSONNEL IN ACCORDANCE WITH THESE INSTRUCTIONS** ⚠

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
    - Health and Safety at Work Legislation
    - BS EN Codes of Practice
    - Fire Precautions
    - IEE Wiring Regulations
    - Building Regulations
- DO NOT immerse the appliance in water.
- DO NOT place hands in either food chute.
- DO NOT attempt to cut frozen food with the appliance.
- Suitable for indoor use only.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Regularly check the screws fixing the blades to the cutting discs and tighten as necessary
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- This appliance is not suitable for use by children.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an Apuro agent or a recommended qualified technician in order to avoid a hazard.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

Pack Contents

The following is included:

- Apuro Vegetable Cutter
- Food pusher
- Deflector
- Cleaning brush
- Instruction manual

Apuro prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

⚠ **Note: Cutting discs are available separately. Contact your supplier for more details.**

Operation

Location of Controls

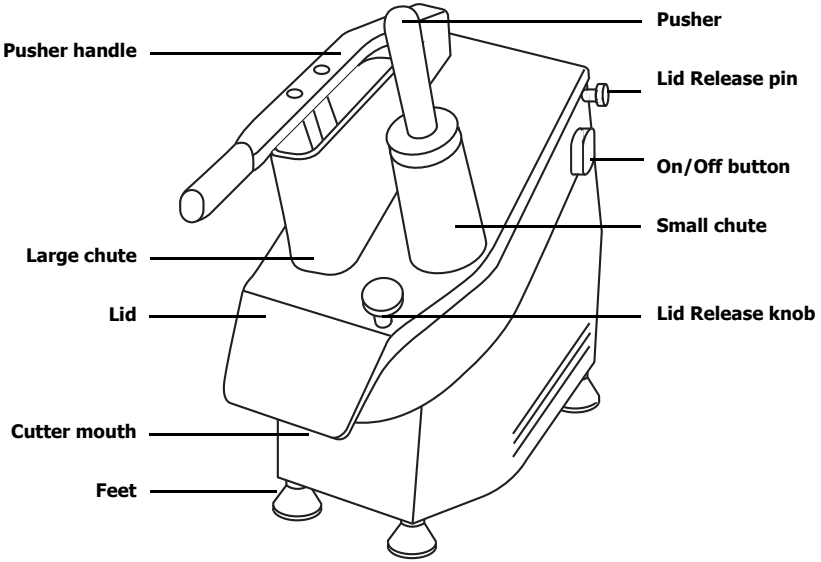

Cutting Vegetables

⚠ **Note: Before using the first time clean all parts that come into contact with food with warm soapy water.**

1. Connect the appliance to the mains power supply.
2. Place the vegetables in the required food chute.
3. Lower the handle or place the food pusher in the chute.

⚠ **WARNING: Do not use anything other than the food pusher supplied with the appliance to press vegetables against the blades.**

4. Place a suitable container beneath the exit chute to collect the cut vegetables.
5. Turn the power On **[I]**. The discs begin to spin.
6. Press down on the handle or the food pusher. As the vegetables are cut they are ejected from the cutter mouth.
7. Once all vegetables are cut turn Off the appliance and disconnect it from the power supply.

Selecting a Cutting Disc

The Apuro vegetable cutter utilises various discs for different tasks.

Disc	Use	Disc	Use
	4mm Grating Disc Suitable for medium/coarse grating Product Code: AA077		2.5mm Julienne Disc Suitable for thin slicing Product Code: AA084
	7mm Grating Disc Suitable for coarse grating Product Code: AA078		4mm Julienne Disc Suitable for medium slicing Product Code: AA085
	3mm Grating Disc Suitable for medium grating Product Code: AA081		8 x 8mm French Fries Disc For French fries Product Code: AA086 Use with 8mm Slicing Disc (AA079)
	8mm Slicing Disc Suitable for medium/thick slicing Product Code: AA079		10 x 10mm French Fries Disc For French fries Product Code: AA087 Use with 10mm Slicing Disc (AA083)
	2mm Slicing Disc Suitable for thin slicing Product Code: AA080		8 x 8mm Dicing Disc For Diced vegetables Product Code: AA088 Use with 8mm Slicing Disc (AA079)
	4mm Slicing Disc Suitable for medium slicing Product Code: AA082		10 x 10mm Dicing Disc For Diced vegetables Product Code: AA089 Use with 10mm Slicing Disc (AA083)
	10mm Slicing Disc Suitable for thick slicing Product Code: AA083		

⚠ **Note: Regularly check the screws fixing the blades to the cutting discs and tighten as necessary.**

Changing the Cutting Disc

⚠ **WARNING: The blades on the cutting disc are sharp. Take care to avoid the edges when changing discs.**

1. Disconnect the appliance from the mains power supply.
2. Turn the lid release knob anti-clockwise.
3. Remove the food pusher (if inserted) and carefully lift the lid.
4. Turn the disc anti-clockwise and lift it away from the appliance. This may require a sharp tap to free it from the shaft.
5. Slot the new disc in place. Turn the disc if necessary to drop it in place over the lugs.

⚠ **Note: Ensure the appliance is clean and free from food debris when changing discs to ensure the disc can be securely fitted.**

6. Turn the disc clockwise to secure it in position.
7. Lower the lid and turn the lid release knob clockwise to secure it in place.

⚠ **Note: The deflector can also be removed by following this procedure. Removing the deflector is necessary to thoroughly clean the appliance.**

Using the Base Discs

Some cutting processes require two discs to be inserted into the appliance.

1. Open the lid and remove the cutting disc(s), as described above.
2. Slot the desired base disc onto the appliance.

⚠ **Note: The base cutting disc is not perfectly circular and has a lip that sits in the cutter mouth to keep it securely in place.**

3. Slot the 8 or 10mm slicing disc on top of the base disc, ensuring it is securely connected to the centre pin and spins freely.

⚠ **WARNING: Only the thinner aluminium cutting discs are suitable for use with the base discs. DO NOT use the thicker plastic cutting discs.**

4. Lower the lid and turn the lid release knob clockwise to secure it in place.

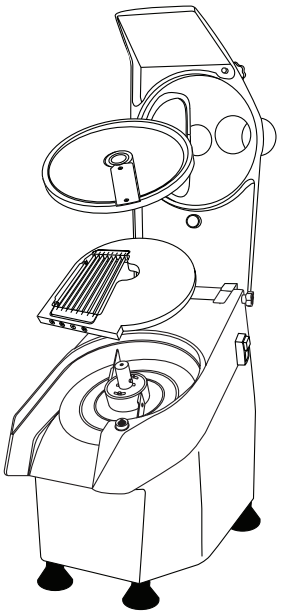

Cleaning, Care & Maintenance

- Always turn off and disconnect the appliance from the power supply before cleaning.
- Use soapy water and a damp cloth to clean the appliance and cutting discs.
- DO NOT wash the cutting discs in the dishwasher.
- Dry thoroughly after cleaning.
- Ensure all foodstuffs are removed from the appliance after each use.
- If required, lift the cover and loosen the two Lid Release knobs to remove the lid and clean.

Troubleshooting

Fault	Probable Cause	Action
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call Apuro agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
	Internal wiring fault	Call Apuro agent or qualified technician
Vegetables are not being ejected from chute	Internal blockage	Disconnect from power supply and empty chute/cutting area of vegetables

Technical Specifications

Model	Voltage	Power	Current	Cutting Disc RPM	Dimensions h x w x d mm	Weight
G784-A	230V 50Hz	550W	2.4A	270	470 x 220 x 490	22.5kg

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Apuro products have been approved to carry the following symbol:

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.

Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

Equipment Type	Vegetable Preparation Machine
Model	G784-A
Legislation	C-Tick AS/NZ 3820 Essential Safety Requirements for Low Voltage Electrical Equipment
Standards	AS/NZS 61000.6.3:2007 AS/NZS 60335.1:2002+A1+A2 IEC 60335-2-64:2002+A1
Producer Name	Apuro
Producer Address	15 Badgally Road, Campbelltown, NSW 2560

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

Date	21/11/12
Signature	
Full Name	Richard Cromwell
Position	Commercial Director

apuro